

Setting the Timer (Timer Settings)

NOTE

- The Timer Settings screen is made up of several screens. Use the [▼] and [▲] keys to scroll to the desired screen and make the required settings.
- When the [▼] or [▲] key should be pressed, the indication  is displayed in this manual.

Setting the Current Date and Time

Sets the current date and time. The date and time set here is also used as the time setting required for functions for which the time can be set.

1 Call up the desired screen as follows:





2 Enter the current date (year, month, day) and time with the Numeric keys (0 - 9), and press the [OK] key.

NOTE


- Enter the date as four digits without a space.
- Example: March 25 → 0325
 - Enter all the four digits for the year.
 - Enter the time in 24-hour notation as four digits without a space.
- Example: 7:05 a.m. → 0705
11:18 p.m. → 2318
 - If you make a mistake when entering values, press the  key, and enter the values again starting with the year.
- When setting the Time Zone Settings:
Press the [Time Zone Settings] key, then select the time zone where the machine is located. Then press the [OK] key.

NOTE


- Press the [▼] or [▲] key to scroll the list.
- The default setting is "GMT-5:00".
Central time (US Canada) :GMT-5:00
Eastern time (US Canada) :GMT-6:00
Mountain time (US Canada) :GMT-7:00
Pacific time (US Canada) :GMT-8:00

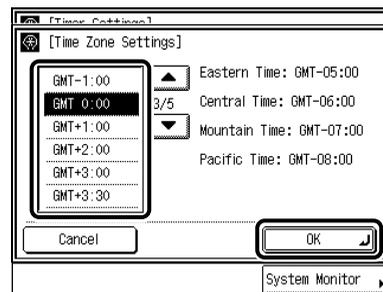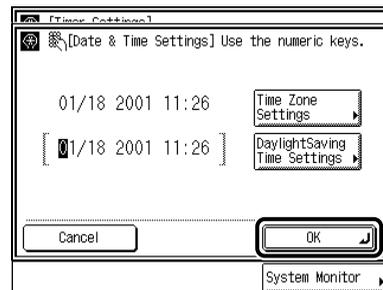

- When setting the Daylight Saving Time Settings: Press the [Daylight Saving Time Setting] key, then press the [ON] key.

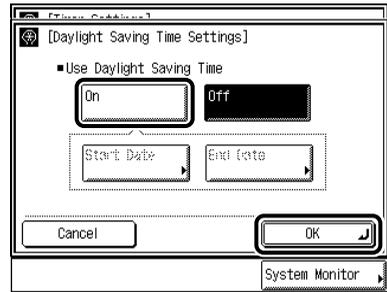

Press both the [Start Date] and [End Date] keys to set the time.


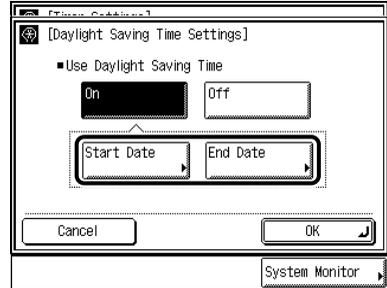


Set the month, week, day, time to start and end the Daylight Saving Time settings, and press the [OK] key.



NOTE

- You can set the time from 0-23, in 1 hour increments.
- The default setting is "Off".
- When you set the Daylight Saving Time, the machine automatically sets the standard time of the machine one-hour forward.

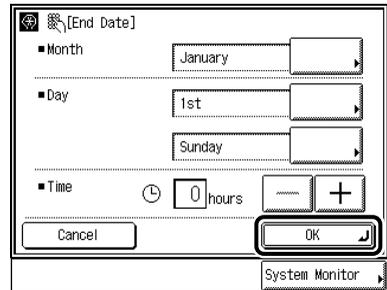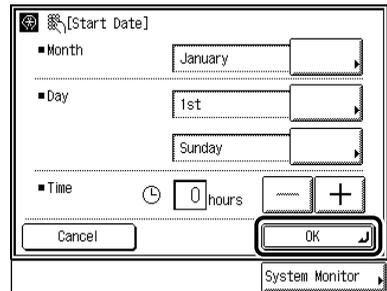

3 Press the [Done] key.

Repeat this until the Basic Features screen appears again.

Setting the Time to Initiate Auto Sleep after Finishing Operations

If the machine is not operated (no keys are pressed) for a certain period of time, the control panel power switch automatically switches OFF to save power. The machine then enters the Sleep mode.



NOTE


- The default setting is "1 hour".

1 Call up the desired screen as follows:



2 Enter the desired Auto Sleep Time with the [▼] or [▲] key, and press the [OK] key.

The Auto Sleep Time settings are 10, 15, 20, 30, 40, 50 minutes, 1 hour, 90 minutes and 2 to 4 hours (in one-hour increments).

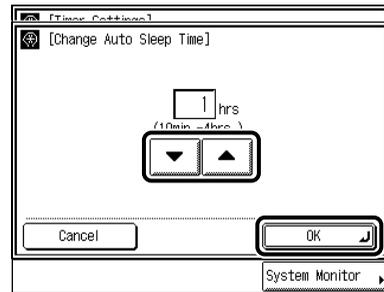

3 Press the [Done] key.

Repeat this until the Basic Features screen appears again.

Setting the Time Taken for Display to Return to Basic Screen after Finishing Operations

If the machine is not operated (no keys are pressed) for a certain period of time, the display returns to the Basic screen (Standard setting) of the selected function. This time is called “Auto Clear Time”. Auto Clear Time can be set from 1 to 9 minutes in one-minute increments. Auto Clear Time can also be set to “Off”.



NOTE


- The default setting is “2 minutes”.
- When “0” is set, Auto Clear function is not set.

1 Call up the desired screen as follows:



2 Enter the desired time period with the Numeric keys (0 - 9) or [-] and [+] keys, and press the [OK] key.

The Auto Clear Time settings are from 0 to 9 minutes (in one-minute increments).

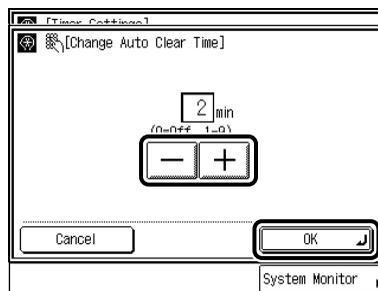

3 Press the [Done] key.

Repeat this until the Basic Features screen appears again.

Setting the Time Taken for the Unit to Quiet Down after Last Task

This machine enters the Quiet mode after a specified amount of time has elapsed following a print job or after a key has been pressed. On this screen you can specify the amount of time that must elapse prior to entering the Quiet mode.



NOTE


- The default setting is "1 minute".
- When "0" is set, the Quiet mode is not set.

1 Call up the desired screen as follows:



2 Enter the desired time period with the Numeric keys (0 - 9) or [-] and [+] keys, and press the [OK] key.

The Quiet mode settings are from 0 to 9 minutes (in one-minute increments).

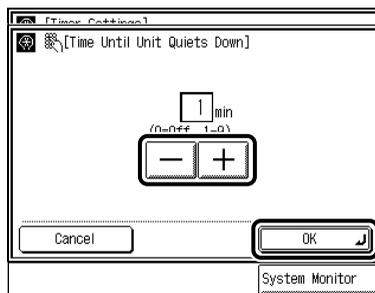

3 Press the [Done] key.

Repeat this until the Basic Features screen appears again.

Setting the Time That the Unit's Power Turns OFF on Different Days of the Week

You can set the time that the machine is automatically turned OFF for each day of the week.

- Setting range: Daily from Sunday to Saturday, 00:00 to 23:59 in one-minute increments

NOTE

- The default setting is "no setting".
- When Auto Clear Time and Daily Timer are both set, Auto Clear Time has priority.


1 Call up the desired screen as follows:



2 Select the day of the week, enter the time with the Numeric keys (0-9), and press the [OK] key.

NOTE

- Enter the time in 24-hour notation as four digits without a space.
 - Example: 7:05 a.m. → 0705
 - 11:18 p.m. → 2318
- If you make a mistake when entering the time, choose the day of the week again, then enter a four-digit number.
- If you do not want to specify the time, press the  key.

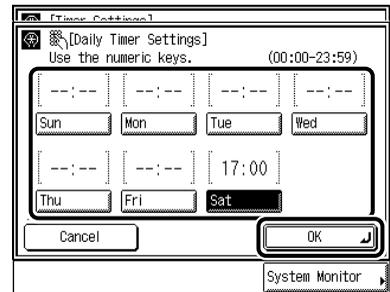

3 Press the [Done] key.

Repeat this until the Basic Features screen appears again.

Setting the Low-Power Mode Time

If the machine is not operated (no keys are pressed) for a certain period of time after prints have been made or a key operation performed, the machine automatically enters the Low-Power mode. You can easily change the time for the machine to enter the Low-Power mode.



NOTE


- The default setting is "15 minutes".

1 Call up the desired screen as follows:



2 Select the Low-Power Mode Time by pressing the [▼] or [▲] key, and press the [OK] key.

The Low-Power Mode Time settings are 10, 15, 20, 30, 40, 50 minutes, 1 hour, 90 minutes and 2 to 4 hours (in one-hour increments).

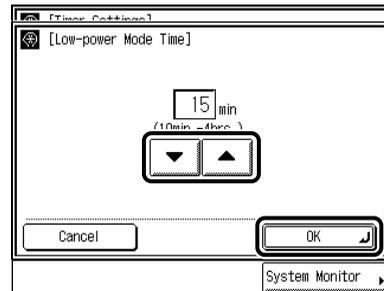

3 Press the [Done] key.

Repeat this until the Basic Features screen appears again.