


Timer Settings

You can make various timer related settings for the machine, such as adjusting the current time, and specifying the time it takes for the machine to enter into the Sleep mode.


Current Time Adjustment

You can make adjustments to the current time. For instructions on setting the current date and time, see "Current Date and Time," on p. 7-50.


- 1 Press **Ⓢ** (Additional Functions) → [Timer Settings].

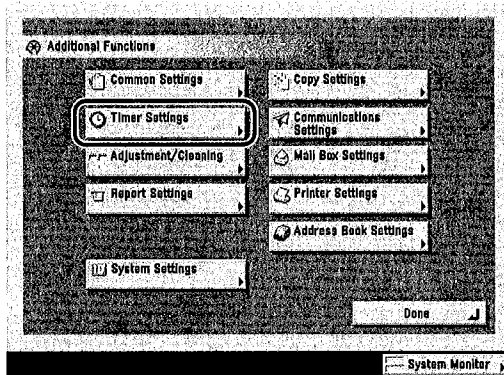

2 Press [Time Fine Adjustment].

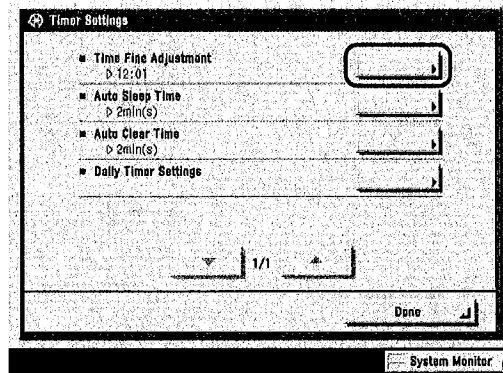

3 Press [-] or [+] to adjust the current time → press [OK].

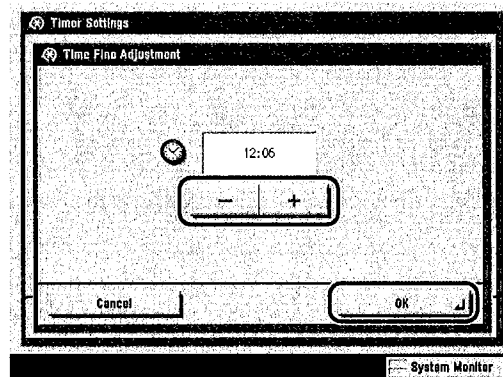

The current time is displayed in 24-hour notation, and can be adjusted in one minute increments.

Press and hold down [-] or [+] to quickly scroll to the correct time.

Even if you change the time from 00:00 to 23:59, or 23:59 to 00:00, the date will not be changed.

The selected mode is set.

4 Press [Done] repeatedly until the Basic Features screen appears.

5

Auto Sleep Time


If the machine is idle for a certain period of time (after the last print job or key operation is performed), the control panel power switch automatically switches OFF to save power. The machine has entered the Sleep mode.




NOTE

The default setting is '2' minutes.

- 1 Press (Additional Functions) → [Timer Settings] → [Auto Sleep Time].

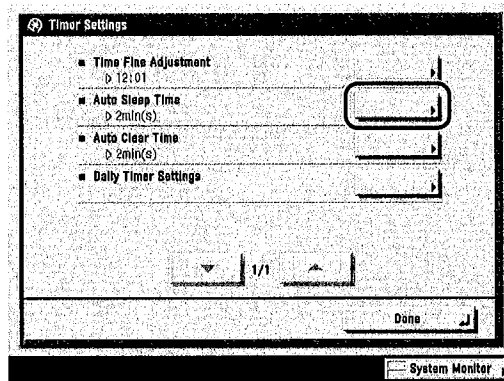

- 2** Press [▼] or [▲] to specify the desired Auto Sleep Time → press [OK].

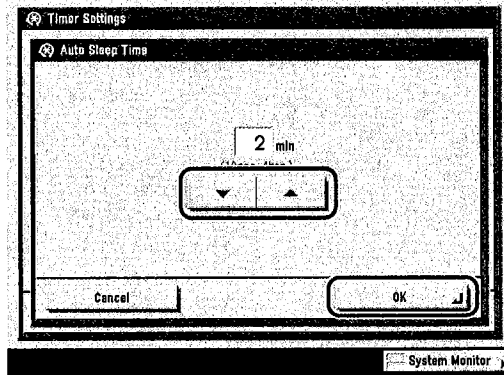

The Auto Sleep Time can be set from 10 seconds, 1, 2, 10, 15, 20, 30, 40, 50 minutes, 1 hour, 90 minutes, 2, 3, and 4 hours.

The selected mode is set.

- 3** Press [Done] repeatedly until the Basic Features screen appears.

Auto Clear Time

If the machine is idle for a certain period of time (after the last print job or key operation is performed), the display returns to the Basic Features screen (standard settings) of the selected function. This period of time is called the "Auto Clear Time."


The Auto Clear Time mode can be set from 0 to 9 minutes in one minute increments, and can also be set to 'Off'.




NOTE

- If '0' is selected, the Auto Clear Time mode is not set.
- The default setting is '2' minutes.

- 1 Press **Ⓢ** (Additional Functions) → [Timer Settings] → [Auto Clear Time].

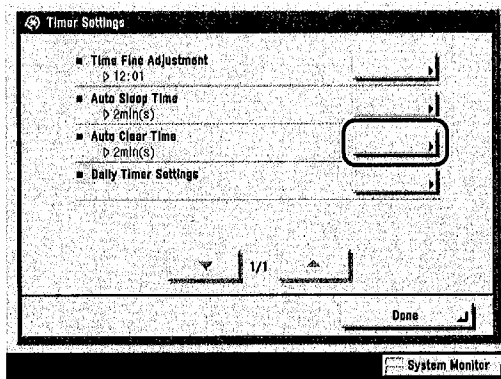

- 2 Press **[-]** or **[+]** to specify the desired Auto Clear Time → press **[OK]**.

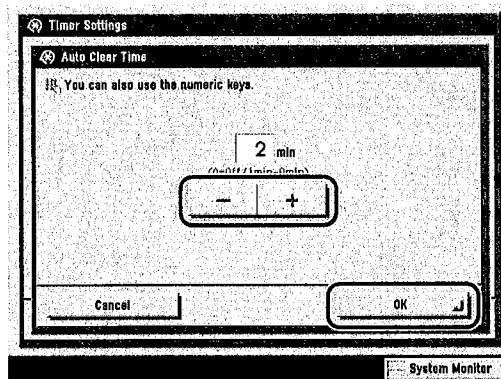

The Auto Clear Time can be set from 0 to 9 minutes (in one minute increments).

You can also enter values using **Ⓢ** - **Ⓢ** (numeric keys).

The selected mode is set.

- 3 Press **[Done]** repeatedly until the Basic Features screen appears.

Daily Timer Settings


You can set the time that the machine automatically enters the Sleep mode each day of the week.



NOTE

- Setting Range: Daily, from Sunday to Saturday, 00:00 to 23:59 in one minute increments.
- If the Auto Sleep Time and Daily Timer modes are both set, the Auto Sleep Time setting has priority.
- By default, the Daily Timer Settings are not set.


1 Press (Additional Functions) → [Timer Settings] → [Daily Timer Settings].

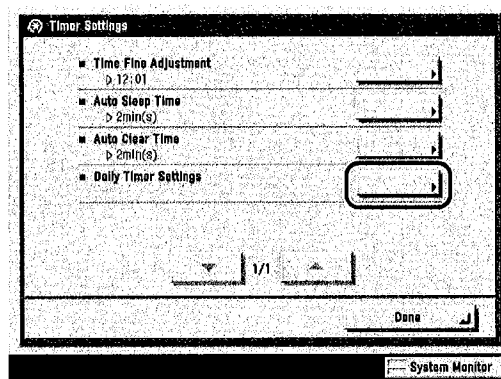

5

Customizing Settings - Timer and Adjustment/Cleaning Settings

- 2** Select the day of the week → enter the time using 0 - 9 (numeric keys) → press [OK].

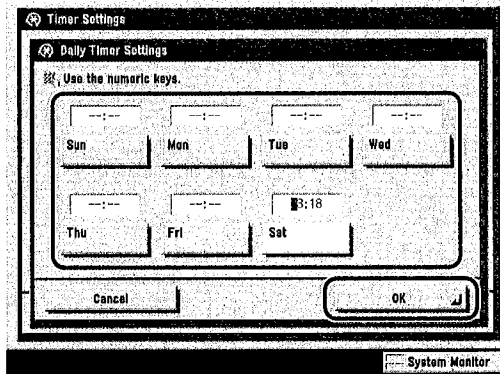


Enter the time in 24-hour notation as four digits (including zeros) without a space.

Examples: 7:05 a.m. → 0705

11:18 p.m. → 2318

If you make a mistake when entering the time, select the day of the week again → enter another four digit number.

You can also press  (Clear) to clear the incorrect values.

The selected mode is set.

- 3** Press [Done] repeatedly until the Basic Features screen appears.